Sandstrøm

Instruction Manual

7″ Digital Photo Frame

S7DPF10

Contents

Unpacking the Photo Frame **4**

Product Overview **5**

Preparations **6**

Attaching the Stand 6

Connecting to the Mains Power 7

Inserting a Memory Card / USB Flash Drive 8

Main Menu **9**

Selecting the Memory Drive 9

Viewing Photos **10**

Viewing Thumbnails 10

Playing a Slideshow 11

Changing Frame Settings **12**

Setting Auto Run 13

Troubleshooting **14**

Specifications **15**

Safety Warnings **16**

Congratulations on the purchase of your new Sandstrøm Digital Photo Frame.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking the Photo Frame

Remove all packaging from the unit. Retain the packaging. If you dispose it please do so according to local regulations.

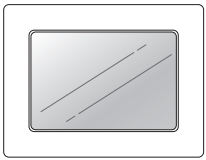

1. Digital Photo Frame

2. Photo Frame Stand
(P.N. : 27-155-06930100)

3. Mains Adapter
(P.N. : 49-501-05100059)



4. Instruction Manual
(P.N. : 46-007-47249019)

If items are missing or damaged, please contact partmaster (UK only).
Tel: 0844 800 3456 for assistance.

Product Overview

Main Unit

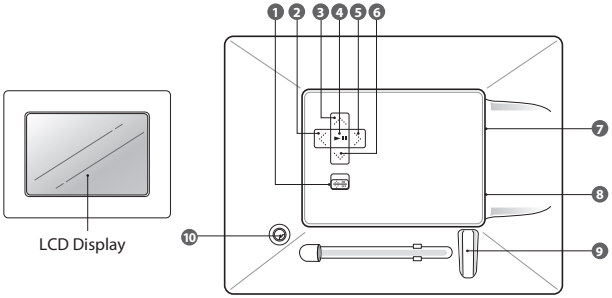

Name	Description
❶ ON / OFF button	• To turn the photo frame on and off
❷ ◁ button	• Press to move right in the menu / thumbnail mode / option settings • To display the next photo
❸ △ button	• Press to move up in the menu / thumbnail mode / option settings
❹ Play / Pause ▶II	• To start / pause the slideshow • To confirm a setting or function
❺ ▷ button	• Press to move left in the menu / thumbnail mode / option settings • To display the previous photo
❻ ▽ button	• Press to move down in the menu / thumbnail mode / option settings
❼ USB host	• To accommodate USB devices such as portable USB flash drives or flash memory card readers
❽ SD/MMC/MS slot	• To accommodate SD, MMC, MS cards
❾ DC-IN socket	• To connect to the mains
❿ Stand receptacle	• To attach the supplied stand

Preparations

Attaching the Stand

1. Take out the stand attached at the back of the photo frame.

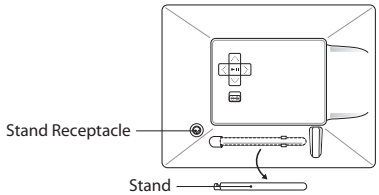

2. Screw in the stand into the stand receptacle.

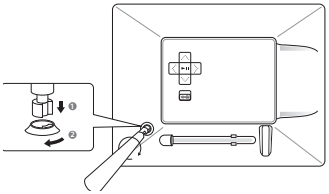

3. Now the stand is fixed, you can choose to display your photo frame in a landscape or portrait position.

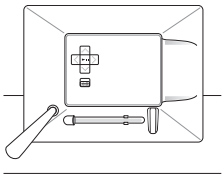

Landscape Position

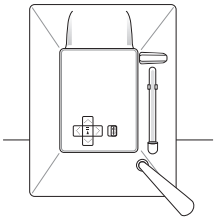

Portrait Position

To take off the stand, unscrew it from its receptacle.

Connecting to the Mains Power

1. Connect the supplied mains adapter (5V DC, 1A) to the photo frame, and plug in the mains adapter into the mains socket.

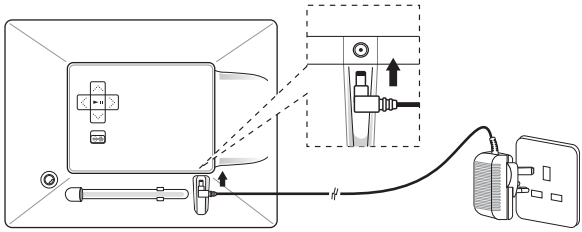

2. Slide the **ON/OFF** button on the photo frame to turn it on.
3. To turn off the photo frame, slide the **ON/OFF** button.

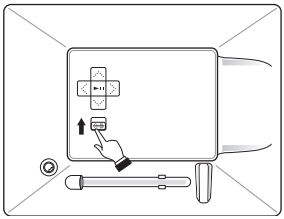

Inserting a Memory Card / USB Flash Drive

This photo frame can only display one storage media's contents at a time.
If more than one storage device is connected, please refer to "Selecting the Memory Drive" and select your desired drive to be displayed in the main menu.

This frame can only play images (JPEG). If files in other formats are played, please use your computer to convert the images to a readable format.

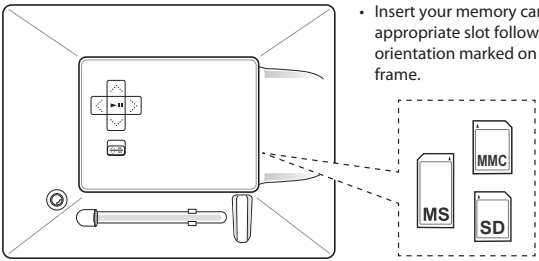

- Insert your memory card into the appropriate slot following the orientation marked on the photo frame.

1. To remove MMC/SD/MS card, pull the card straight out.
2. Some of the newer higher capacity cards may not be compatible with this frame.

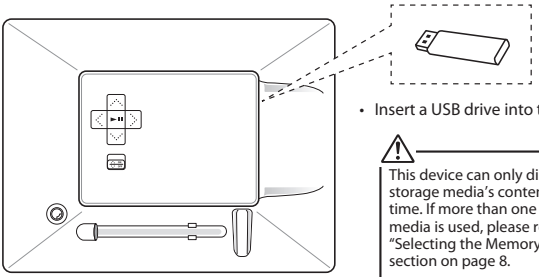

- Insert a USB drive into the USB port.

This device can only display one storage media's contents at a time. If more than one storage media is used, please refer to "Selecting the Memory Drive" section on page 8.

Main Menu

In the main menu, you can select connected source to view photos and change frame settings.

Press and hold the ▶II button to access the main menu. All connected source, setup and now playing icons are displayed.

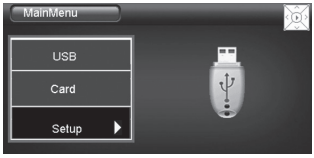

Selecting the Memory Drive

Use the ⋏ or ⋎ buttons to navigate between options in the main menu. And then press the ▶II button to confirm or enter the submenu.

USB	Highlighted when you select a USB flash driver.
Card	Highlighted when you select a SD / MMC / MS card.
Setup	To customise the settings of Digital Photo Frame.

⚠

- In the main menu, if you insert a SD / MMC / MS card or a USB device, the frame will start to the slideshow automatically.
- There is a button indicator on the right of the screen, indicating which button you are pressing.

Viewing Photos

Thumbnail View

In Photo mode, the photos on the selected memory source can be displayed on the screen as thumbnails. Up to 12 photos are displayed at a time.

1. Select a memory source (e.g. USB, SD/MMC/MS) on the main menu and press the ►II button. The thumbnail mode appears.
2. Press the ^, v, < or > button to select photo, and then press the ►II button. The photo is displayed on the screen.
3. To navigate through the thumbnails or move to the next or previous page of thumbnails, press the ^, v, < or > button.

Playing a Slideshow

You have two ways to start playing a slideshow:

1. While browsing a single photo, press the ▶II button to start a slide show from the current photo.
   - Press the ▶II button once to open the OSD menu and pause the slideshow, press twice to carry on the slide show.
   - Press the ^ button to exit the slideshow and view thumbnails of the photos.
   - Press the v button to rotate the photo.

   Using OSD menu

   You also can use the OSD menu to view photos manually one by one.

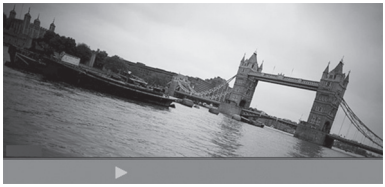

   Press the ▶II button while viewing a photo or slideshow. The OSD menu appears on the screen and the slideshow pauses.
2. Press the < or > button to navigate between icons on the OSD menu.
   - To start or resume a slideshow from the current photo, highlight ▶ on the screen and press the ▶II button. The ▶ icon is changes to II icon on the screen.
   - To select previous/next photo, highlight ⏮ or ⏭ on the screen, and then press the ▶II button.
   - To rotate a photo, highlight ↻ on the screen and press the ▶II button repeatedly.
   - To zoom on a photo, highlight 🔍 on the screen and press the ▶II button repeatedly to magnify a photo in the following sequences: X2, X4, X8, X16. When a photo is magnified, hold the ^, v, < or > button to view another part of the photo.
   - To exit and return to the previous screen, highlight ↩ on the screen and press the ▶II button.

Changing Frame Settings

The system settings let you customize and configure your Digital Photo Frame.

1. Select the Setup icon in the main menu and press the ▶II button. The Setup Menu appears on the screen.
2. To select a setting option, press the ^ or v button.
3. To change the value, press the ▶II button. Secondly, press the ^, v, < or > button to select an option. Thirdly, press the ▶II button to conform.
4. Press and hold the ▶II button to return to the main menu.

	Setting Items	Description
Photo Setup	Slide show time	Set up the interval time for slideshow. The available options include: 3s, 5s, 15s, 1 min, 15mins, 1 hour.
	Photo Mode	Set photos to Full Screen or Standard Screen when you are viewing them.
	Transition Effect	Set up the style of transition while playing a slide show.
	Date Stamp	Display the time information of photos when you are viewing them.
	Shuffle	To play photos in a random order or in order while playing a slideshow.

	Setting Items	Description
General Setup	Language	Set up the language of the OSD menu.
	Brightness	Adjust the brightness of the screen. The available options include: +3, +2, +1, 0, -1, -2, -3.
	Contrast	Adjust the contrast of the screen. The available options include: +3, +2, +1, 0, -1, -2, -3.
	Saturation	Adjust the saturation of the screen. The available options include: +3, +2, +1, 0, -1, -2, -3.
	Auto run	Set the Digital Photo Frame to run a specified mode automatically when you switch on it.
	Default	Reset all settings to the default settings.

Setting Auto Run

You can set the Digital Photo Frame to run a specified mode automatically when you switch it on.

1. Select the **SETUP** icon on the main menu and then press the ►II button. The Setup Menu appears on the screen.
2. Press the ^ or v button to select **General Setup**, and then press the ►II button.
3. Press the ^ or v button to select **Auto run**, and then press the ►II button
4. Press the ^ or v button to select a specified mode you like:
   - **Photo:** The Digital Photo Frame will start a slideshow when you switch it on.
   - **Main menu:** The Digital Photo Frame will display the main menu when you switch it on.
5. Press the ►II button to confirm.
6. Press and hold the ►II button to exit.

Troubleshooting

No power

- Check to make sure the mains plug is plugged into the mains socket.
- Make sure there is power in the mains socket.

Unable to view photos on the Digital Photo Frame

- Not all JPEG files are compatible. Please open the files in a computer and resave them as JPEG files and then try to playback in the photo frame.
- Check if the memory card is compatible.

If the photo display is distorted or cannot display properly

- Go to the main menu, then the SETUP and change the display mode to match your photo (Full / Standard).

If photo display seems slow

- Use lower resolution photos.

The image is distorted or blurred.

- Resolution of the image is too low. Try playing a file with a higher resolution. Resolution of 800 X 600 pixels is recommended.

Cannot detect any external device via the USB 2.0 A-Type port

- This photo frame only support a USB flash drives and it does not support any external hard disks or MP3 player via the USB port.

The photo frame does not work properly

- Please switch off the photo frame and on again.

Specifications

Display	Analog LCD Panel size:7 inches Screen aspect ratio: 16:10 Resolution: 432*234 pixels
I/O	DC in
Power adaptor	Input: 100~240V AC, 50~60Hz Output: DC 5V 1.0A
USB port	USB Host 2.0 Supports USB flash media USB Max Load : DC 5V, 400mA
Supported peripheral devices	SD™ (Secure Digital Card), MMC™ (MultiMedia Card), MS™ (Memory Stick)
Supported photo format	JPEG, Maximum resolution: 8000*8000 pixels
Storage condition	Humidity<90%,-20~60°C
Working condition	Humidity <80%,0~45°C
Dimension(L x W x H)	204 x 151 x 20mm
Weight (g)	293g

Features and specifications are subject to change without prior notice.

Safety Warnings

When using electrical appliances, basic precautions should always be followed, including the following:

- Read all the instructions and retain this instruction manual.
- Ensure that all electrical connections (including the mains adaptor and power cable) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains adaptor before making or changing connections.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of your photo frame.
- Do not allow the photo frame to be exposed to dripping or splashing.
- Never store in hot or very cold areas. Recommended operating temperature is 0~40°C.
- Do not use the photo frame in areas with high moisture (e.g. bathroom) or dusty areas.
- Do not place hot objects or naked flame sources such as lighted candles or night lights on or close to the photo frame. High temperatures can melt plastic and lead to fires.
- Do not obstruct the ventilation openings of the photo frame with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the photo frame.
- Do not handle the power cable with wet hands.
- Be careful with the LCD panels on the photo frame.
- Only use attachments/accessories specified by the manufacturer.
- When the photo frame is not in use or unattended for a long period of time, disconnect it from the mains socket.
- Do not remove any fixed cover as this may expose dangerous voltages.
- Do not continue to operate the photo frame if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains adaptor and consult your dealer.
- Never let anyone especially children push anything into holes, slots or any other opening on the case - this could result in a fatal electrical shock.
- Route the power cable so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear, tear or heat.

Note about LCD screen

The LCD screen is manufactured using high-precision technology. However, some tiny black points and/or bright points (red, blue or green in colour) may constantly appear on the LCD screen. These points are generated in the manufacturing process and are normal.

Note: If you require a replacement for any of the items listed below, please quote their corresponding part numbers:	
Replacement Part	**Part Number**
Photo Frame Stand	27-155-06930100
Mains Adapter	49-501-05100059
Instruction Manual	46-007-47249019

Partmaster .co.uk

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only) Calls charged at National Rate.

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

DSG Retail Ltd • Maylands Avenue • Hemel Hempstead
Herts • HP2 7TG • England

(P.N.: 46-007-47249019)